

# CEILING PAN

83669

## ASSEMBLY INSTRUCTIONS

Assembly of this fixture will be accomplished by first preparing the mini-pendants for hanging, attaching the swivels to the ceiling pan, installing the mounting hardware to the junction box, making all necessary electrical connections, and then hanging the fixture.

**SAFETY WARNING:** Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.

### STEP 1


- 1 To prepare the mini-pendants (purchased separately) for hanging from the accessory canopy, it will be necessary to remove the swivel (1) from the canopy (2) supplied with the mini-pendant. This is done by removing hex nut (4) and lock washer (3) - See Drawing 1
- 2 Proceed to assemble mini-pendant according to instructions supplied with fixture. Do not attach the swivel (1) removed from canopy (2) to the end of rods at this time. The swivel is needed to assemble the accessory canopy

### STEP 2


- 1 Take pan (5) and place reinforcement plate (6) inside and line up the holes - See Drawing 2
- 2 Slip one of the swivel from the mini-pendant through one of the three holes (a) spaced 120 degrees apart from center.
- 3 Slip lockwasher (3) onto swivel and then thread hex nut (4) onto swivel and hand-tighten only at this time. Repeat process for the remaining two swivels.
- 4 Make sure center hole (b) of pan (5) and reinforcement plate (6) are aligned.
- 5 All hex nuts (4) can be tightened at this time.
- 6 Mini-pendants can now be assembled to the pan.

**STEP 3** Refer to Hanging Instruction Sheet [FRIS19-07] to hang fixture. Then refer back to this sheet to continue fixture installation.

[DRAWING 1]

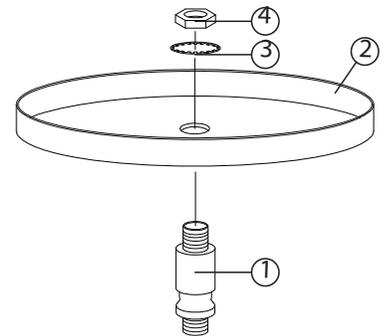

[DRAWING 2]

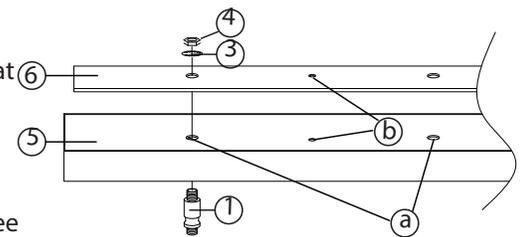

**FREDRICK RAMOND**  
ESTABLISHED 1965

*A Division of Hinkley Lighting, Inc.*  
33000 PIN OAK PARKWAY | AVON LAKE, OHIO 44012  
toll free 800.446.5539 | phone 440.653.5500 6.15.10

# FRIS19-06

**SAFETY WARNING:** Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.


## STEP 1

- 1 Shut off electrical current before starting. If the fixture you are replacing is turned on and off by a wall switch, simply turn the switch off. If not, remove the appropriate fuse (or open the circuit breakers) until the fixture is dead.
  - DO NOT restore current - either by fuse, breaker or switch - until the new fixture is completely wired and in place.

## STEP 2

- 1 Slip mounting screw (6) through hole (c) from the back of retaining plate (1). Attach mounting screws (6) to retaining plate (1) using lockwasher (7) and hex nut (8).
- 2 Attach retaining plate (1) to junction box (2) with the two screws (3) not provided.  
Note: It is recommended that additional support be added at points (a). No hardware is provided and it is up to the customer to determine proper mounting hardware to be used for their particular application.
- 3 Slip holes (b) in canopy (4) over threaded stems (6) and hold in position, making sure not to pinch wires.
- 4 Thread decorative barrel knobs (5) onto end of threaded stems (c) and tighten to secure fixture to ceiling.

[DRAWING 1]

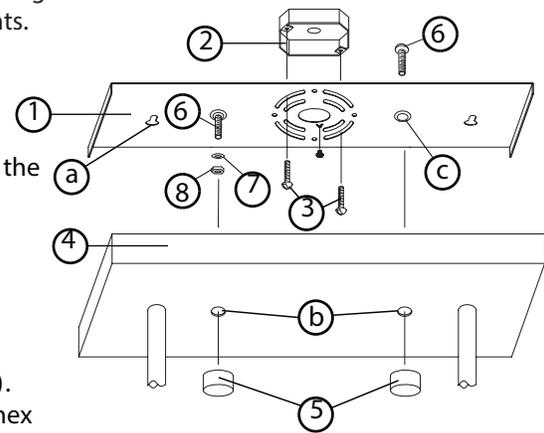

**FREDRICK RAMOND**  
ESTABLISHED 1965

*A Division of Hinkley Lighting, Inc.*  
33000 PIN OAK PARKWAY | AVON LAKE, OHIO 44012  
toll free 800.446.5539 | phone 440.653.5500 6.15.10