COCO



FR53232BNI, FR53232BCA

Bulbs: 60W G9 Replacement Parts: GLASS: R53230GL-BNI, R53230GL-BCA

ASSEMBLY INSTRUCTIONS

Assembly of this fixture will be accomplished by first installing the mounting hardware to the junction box, making all necessary electrical connections, mounting the fixture to the wall and then installing the fixture glass.

SAFETY WARNING: Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.

STEP 1

- Remove ball knobs (c) from front of backplate (d) see Drawing 1.
- 2 Remove retainer plate (a) from backplate (d).
- 3 Attach retainer plate (a) to junction box using two 8-32 screws (b).
- 4 Additional screws can be installed at points (e) for additional mounting support .

 Please use appropriate anchor for material the fixture is being mounted to.

STEP~2 Make electrical connections from supply wire to fixture lead wires. Refer to instruction sheet (I.S. 18) and follow all instructions to make all necessary wiring connections. Then refer back to this sheet to continue installation of this fixture.


STEP 3

- Slip holes (g) in backplate (d) over screws (f) on retainer plate (a) see Drawing 1.
- 2 Thread ball knobs (c) onto end of screws (f) and tighten to secure back plate to wall.

STEP 4

- To install glass, slip hole in base of shade harp (1) over socket (2) see Drawing 1.
- Thread socket ring (3) onto socket (2) and tighten. Making sure shade harp arm is facing the back of the fixture.
- 3 Fixture can now be lamped accordingly.
- 4 Thread bulb shield (4) onto socket (2) and hand tighten until snug.
- 5 Slip clear rubber washer (5) onto top of shade harp (1).
- 6 Slip center hole of glass shade (6) over threaded stud on top of shade harp (1).
- 7 Thread decorative knob (7) onto threaded stud of shade harp (1) and tighten to secure glass shade (6).

[DRAWING 1]

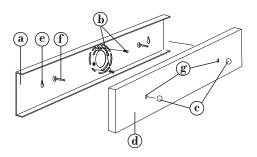

[DRAWING 2]

