



# LUXE

FR31550PCM, FR31550VBZ, FR31550BNI

Bulbs: 100W MEDIUM

## ASSEMBLY INSTRUCTIONS


Assembly of this fixture will be accomplished by first assembling the main body, making all necessary electrical connections, mounting the fixture to the wall, and then installing the glass.

**SAFETY WARNING:** Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.


### STEP 1

- 1 Remove mounting plate (a) from fixture back plate (b) by removing the four flat head screws (c) - See Drawing 1.
- 2 Slide the wires from the junction box, through the large center hole, making sure curved slots (d) line up with the threaded holes (e) in the junction box.
- 3 Using two 8-32 screws (f) attach the main mounting plate (a) to the junction box, making sure side of mounting plate (a) is square to the ceiling.
- 4 Make electrical connections from supply wire to fixture lead wires. Refer to instruction sheet [FRIS18] and follow all instructions to make all necessary wiring connections. Then refer back to this sheet to continue installation of this fixture.
- 5 To mount fixture, slide the back plate (b) over mounting plate (a).
- 6 Attach back plate (b) to the mounting plate (a) using the screws (c).

[DRAWING 1]

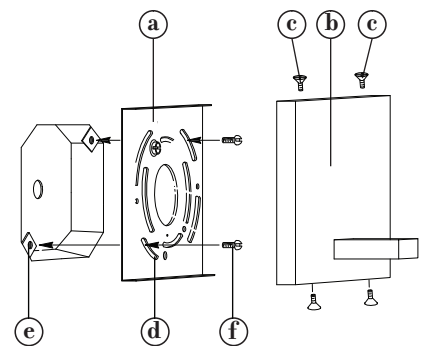


[DRAWING 2]

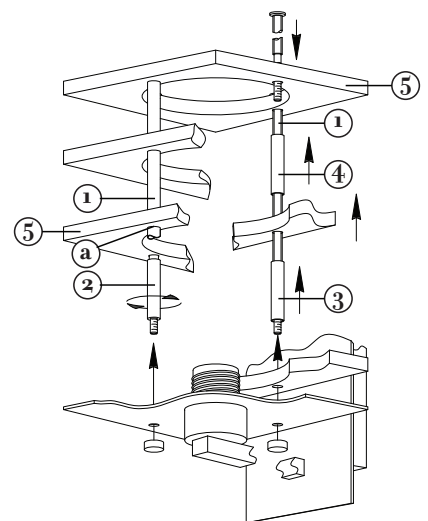

### STEP 2

- 1 The main body is assembled using the 4 uprights and spacers supplied. The uprights must be taken apart first by removing the large barrel knob (2) from the end of upright (1) - See Drawing 2.
- 2 Unthread bottom spacer (2) from upright (1).
- 3 The two remaining spacers (3) and (4) should slip off the upright (1).
- 4 Slip one upright (1) through each of the four small holes (a) in the clear crystal (5).
- 5 Slip one spacer (3) over each of the uprights (1).
- 6 Slip 2nd piece of clear crystal (5) onto the four uprights.
- 7 Slip one spacer (3) over each of the uprights (1).
- 8 Slip 3rd piece of clear crystal (5) onto uprights (1).
- 9 Thread bottom spacer (2) onto end of upright and HAND TIGHTEN ONLY. DO NOT use pliers to tighten spacer. Over tightening could chip the crystal.
- 10 Slip bottom cover, with socket, onto the four uprights and thread the barrel knob onto the end to complete assembly. DO NOT use pliers to tighten barrel knob.

[DRAWING 3]

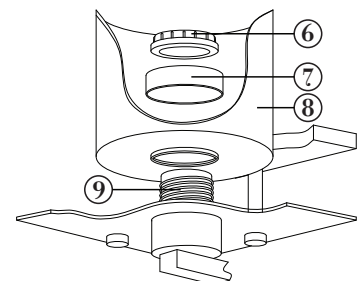

### STEP 3

- 1 To install glass, remove socket ring (6) and spacer (7) from socket (9) - See Drawing 3.
- 2 Slip glass (8) over socket (9).
- 3 Slip spacer (7) over socket and thread socket ring (6) back onto socket and hand tighten to secure glass.
- 4 Fixture can now be lamped accordingly.



**FREDRICK RAMOND**  
ESTABLISHED 1965

A Division of Hinkley Lighting, Inc.  
33000 PIN OAK PARKWAY | AVON LAKE, OHIO 44012  
toll free 800.446.5539 | phone 440.653.5500